



CAVIUS™

YOUR GUARDIAN ANGEL

4-IN-1 PERSONAL PROTECTION

1

**ATTACK
ALARM**

2

**SMOKE
DETECTOR**

3

**DOOR
ALARM**

4

**BAG
ALARM**



Product Design by Glenn Hoerjmoose

FULL USERS GUIDE

INSTRUCTIONS

General Maintenance

• Low battery warning tone

Will be emitted when the battery is near to expiry.
This will continue every minute until the battery is depleted.

- **Alarm Siren Capacity** is 130db/ .1m, or 85db/3m.
- **Vacuum the smoke detector frequently.**
- **Remove the battery when stored.**

Getting Started

- 1 Package contents; CAVIUS device, carabiner, strap and O-ring.
- 2 Slide off stainless steel tube [Z].
- 3 Remove separation contact-tab between battery and contact point by pulling, then discard the tab. Device will emit a system test tone and all LEDs will flash 3 times = unit OK.
- 4 Slide O-ring [Y] provided over stainless steel tube.
- 5 Replace stainless steel tube [Z], insert strap into cavity [X] and slide O-ring [Y] back into strap cavity. Attach carabiner.



Alarm Test

- 1 Hold down function button [O] for 2 seconds, alarm will sound.
- 2 Hold down function button [O] for 2 seconds, alarm will turn off.



To Stop Alarm Quickly [OFF] after activation of any settings (while alarm is sounding)
Press and hold function button [O] for 2 seconds. Alarm will deactivate.

1 PERSONAL ATTACK ALARM

Activate Alarm [ON]

Hold down function button [O] for 2 seconds. Alarm will sound.

Deactivate Alarm [OFF]

Hold down function button [O] for 2 seconds. Alarm will turn off.

2 OPTICAL SMOKE DETECTOR

Activate Detector [ON]

Press function button [O] 2 times in quick succession: the smoke detection activation LED [C] will flash RED. The smoke detector is armed after 30 seconds.

Deactivate Detector [OFF]

Press function button [O] 2 times in quick succession: the smoke detection activation LED [C] will stop flashing. The smoke detector is deactivated.

- Smoke Detector function can be activated in conjunction with either movement alarm option.

3 DOOR MOVEMENT ALARM

Setting Instant Alarm [ON]

Press function button [O] 3 times in quick succession: the door alarm activation LED [B] will flash YELLOW. The door alarm will arm in 30 seconds.

- While arming, place CAVIUS in position i.e by door or in drawer. If movement occurs the alarm will sound after an escalating 5 second warning tone.

Disarm [OFF] prior to alarm activation

Press function button [O] 3 times in quick succession: the door alarm activation LED [B] will stop flashing. The door alarm is deactivated.

4 BAG MOVEMENT ALARM

Setting Delayed Alarm [ON]

Press function button [O] 4 times in quick succession: the bag alarm activation LED [A] will flash GREEN. The bag alarm will arm in 30 seconds.

- While arming place CAVIUS in position i.e. in bag, backpack or laptop case. If movement occurs a warning tone will be emitted. If movement continues beyond 5 seconds the alarm will sound. If movement stops within 5 seconds the warning tone will cease.

Disarm [OFF] prior to alarm activation

Press function button [O] 4 times in quick succession: the delayed alarm activation LED [A] will stop flashing. The delayed alarm is deactivated.

General

- If unattended when activated, the selected alarm will automatically deactivate after 2 minutes and the alarm will return to an armed state.
- The appropriate alarm activation LED will flash continuously to inform the user that the alarm has been sounded and reset.
- When armed, the unit LEDs will flash every 10 seconds to advise which alarm is armed.

For optimum performance when using the smoke detector, place as high as possible and have as much free space around the unit as possible.